

## CENTRALIZED AUTOMATIC REPORTING ON TRUNKS (CAROT 1) CAROT CENTER OPERATION AND ADMINISTRATION TRUNK MAINTENANCE FILE—DATA BASE REQUIREMENTS

### 1. GENERAL

**1.001** This addendum supplements Section 010-410-312, Issue 1. Place this pink sheet ahead of Page 1 of the section.

**1.002** This addendum is issued for the following reasons:

- (a) To clarify the test group facility code that should be used for metallic facility terminal (MFT) equipment.
- (b) To include ROTL and trunk priming information for the 4XB Outgoing Trunk Testing System (OTTS)/ROTL.

### 2. CHANGES TO SECTION

**2.001** On Page 7, at end of paragraph 5.14, add the following sentence: It should be noted that code 1020 should be used for MFT equipment.

**2.002** On Page 16, add the following information:

#### I. 4XB OTTS/ROTL

**6.16** The 4XB ROTL gains access to a trunk through the OTTS. The OTTS access is by way of the intertoll and toll connecting test connectors. The test connector number is a 5-digit number indicating the test connector appearance of the trunk. In addition, information is required on signalling class and modifiers, A-pad control state, and relay type. Table H describes the signalling class and modifiers and A-pad control state. Figure 31 shows the trunk priming portion

of the TMF worksheet and provides a list of data items for each character position.

**6.17** CAROT 1 will not be capable of performing 4XB special tests, end tests, HOTL tests, automatic call distribution (ACD) trunk tests, or overseas loop around (O/SLA) tests.

| TRUNK PRIMING |              |   |   |   |   |                |   |   |   |    |                        |    |    |    |    |    |    |    |    |    |    |    |
|---------------|--------------|---|---|---|---|----------------|---|---|---|----|------------------------|----|----|----|----|----|----|----|----|----|----|----|
| CODE          | TRUNK NUMBER |   |   |   |   | CHANNEL NUMBER |   |   |   |    | TRUNK LOCATION ADDRESS |    |    |    |    |    |    |    |    |    |    |    |
|               | 1            | 2 | 3 | 4 | 5 | 6              | 7 | 8 | 9 | 10 | 11                     | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 |
| H             |              |   |   |   |   |                |   |   |   |    |                        |    |    |    |    |    |    |    |    |    |    |    |
| H             |              |   |   |   |   |                |   |   |   |    |                        |    |    |    |    |    |    |    |    |    |    |    |

USE UPPER H FIELD COLUMNS FOR A, B, C, AND D ACTIONS AND AFTER E FOR E/C ACTION. USE LOWER H FIELD COLUMNS AFTER C FOR E/C ACTION AND, IF NEEDED, IN ADDING, DELETING, OR CHANGING A LARGE NUMBER OF TRUNKS.

| CHARACTER POSITION | DATA ITEM   |
|--------------------|---|
| 1                  | H   |
| 2-5                | TRUNK NUMBER—ALPHA, NUMERIC, OR BLANK               |
| 6-10               | CHANNEL NUMBER OF FIRST FACILITY - NUMERIC OR BLANK |
| 11-13              | SIGNALLING CLASS AND MODIFIERS*                     |
| 14                 | A-PAD CONTROL STATE*                                |
| 15                 | TRAIN (0-TC, 1-IT)                                  |
| 16                 | TEST CONNECTOR (0-TC, 1-IT)                         |
| 17-21              | TEST CONNECTOR NUMBER                               |
| 22                 | RELAY TYPE (0-TC, 1-IT)                             |
| -                  | CARRIAGE RETURN†                                    |
| -                  | LINE FEED†  |

\*SEE TABLE H  
†CARRIAGE RETURN AND LINE FEED INDICATE END OF FIELD AND SHOULD BE ENTERED AFTER LAST NONBLANK CHARACTER POSITION

**Fig. 31—Trunk Priming Field—4XB OTTS/ROTL**

### NOTICE

Not for use or disclosure outside the  
Bell System except under written agreement

TABLE H

4XB OTTS/ROTL SIGNALLING AND MODIFIERS AND A-PAD CONTROL STATE  
H FIELD-TMF WORKSHEET (E6303)

| CHARACTER POSITION | DATA ITEM           | DATA ITEM ENTRY | MEANING OF DATA ITEM ENTRY         |
|--------------------|---------------------|-----------------|------------------------------------|
| 11                 | Signaling Class     | 0               | Manual (HOTL and Operator)         |
|                    |                     | 1               | DC Outpulsing                      |
|                    |                     | 2               | MF Outpulsing                      |
|                    |                     | 3               | Simplex Dial                       |
|                    |                     | 4               | Loop Dial                          |
|                    |                     | 5 or 6          | Unassigned                         |
|                    |                     | 7               | CCIS                               |
|                    |                     | 8 or 9          | Unassigned                         |
| 12                 | Signaling Modifier  | 0               | None                               |
|                    |                     | 1               | Expect Delay Dial                  |
|                    |                     | 2               | Expect Stop-Go                     |
|                    |                     | 3               | Expect Both Delay Dial and Stop-Go |
|                    |                     | 4 - 9           | Unassigned                         |
| 13                 | Signaling Modifier  | 0               | None                               |
|                    |                     | 1               | AC Ringing                         |
|                    |                     | 2               | Simplex Ringing                    |
|                    |                     | 3               | Automatic Call Director            |
|                    |                     | 4 - 9           | Unassigned                         |
| 14                 | A-Pad Control State | 0               | None (Open)                        |
|                    |                     | 1               | A-Pad In (Battery)                 |
|                    |                     | 2               | A-Pad Out (Ground)                 |
|                    |                     | 3               | A-Pad In for OTLP Trunk            |
|                    |                     | 4 - 9           | Unassigned                         |