

EQUIPMENT TEST LIST

FUSE MOUNTINGS, FUSE ENCLOSURES, AND FUSES

CONTENTS	PAGE
1. GENERAL	1
7.1 KS-TYPE	2
7.2 24, 35, 67, 70, 74, 75-TYPE CARTRIDGE-TYPE, PLUG-TYPE & FUSE PANELS	2

1. GENERAL

1.01 This section provides an index and information access system to locate the standard tests applicable to equipment listed in the preceding table of contents. Test classification and frequency of periodic routine are also provided.

1.02 This Equipment Test List (ETL) is reissued to incorporate changes which are indicated by an arrow to the left of each line which has been changed.

1.03 Comments on this section should be made by following the instructions in Bell System Practices (BSP), Section 000-010-015.

1.04 Routine test information is arranged in the following order from left to right: Section number, issue/addendum, test letter or paragraph number, test title, test class, frequency, and the last space is for a locally assigned job number.

1.05 Section 010-300-011 provides Equipment Test List instructions.

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

7.0 FUSES, MTGS&ENCL

7.1 FUSES, MTGS&ENCL; KS-TYPE

FOR ALL UNITS

026-370-701	(8/0)	3.01	INSPECT CURRENT CARRYING CONNECTIONS	MW 12M	-----
		3.02	INSPECT MOUNTINGS	MW 12M	-----
		3.03	INSPECT CLIPS & BLADES	MW 12M	-----

OPTIONAL FEATURES, SELECT NO MORE THAN ONE CATEGORY

LINK-TYPE FUSES

026-370-701	(8/0)	3.06	CLEAN AND INSPECT LINK-TYPE FUSE MOUNTINGS	MW 12M	-----
-------------	-------	------	--	--------	-------

PLUG-TYPE FUSES

026-307-701	(8/0)	3.07	CLEAN AND INSPECT PLUG-TYPE FUSE MOUNTINGS	MW 12M	-----
-------------	-------	------	--	--------	-------

TROUBLE TESTS

026-370-701	(8/0)	3.04	CONTACT AREA	TT	-----
		3.05	TEMPERATURE	TT	-----

7.2 FUSES, MTG&ENCL; 24, 35, 67, 70, 74, 75-TYPE CARTRIDGE-TYPE, PLUG-TYPE & FUSE PANELS

SELECT ONLY ONE CATEGORY

24-TYPE FUSES

◆	026-371-501	(9/0)	4.01	INSPECT 24-TYPE FUSES & FUSE MOUNTINGS	MW 12M	-----
---	-------------	-------	------	--	--------	-------

35-TYPE FUSES

◆	026-371-501	(9/0)	4.02	INSPECT 35-TYPE FUSES & FUSE MOUNTINGS	MW 12M	-----
---	-------------	-------	------	--	--------	-------

67-TYPE FUSES

◆	026-371-501	(9/0)	4.03	INSPECT 67-TYPE FUSES & FUSE MOUNTINGS	MW 12M	-----
---	-------------	-------	------	--	--------	-------

70-TYPE FUSES

◆	026-371-501	(9/0)	4.04	INSPECT 70-TYPE FUSES & FUSE MOUNTINGS	MW 12M	-----
---	-------------	-------	------	--	--------	-------

74-TYPE FUSES

◆	026-371-501	(9/0)	4.05	INSPECT 74-TYPE FUSES & FUSE MOUNTINGS	MW 12M	-----
---	-------------	-------	------	--	--------	-------

75-TYPE FUSES

◆	026-371-501	(9/0)	4.06	INSPECT 75-TYPE FUSES & FUSE MOUNTINGS	MW 12M	-----
---	-------------	-------	------	--	--------	-------

CARTRIDGE-TYPE FUSES

◆	026-371-501	(9/0)	4.08	INSPECT CARTRIDGE-TYPE FUSES & FUSE MOUNTINGS	MW 12M	-----
---	-------------	-------	------	---	--------	-------

LINK-TYPE FUSES

◆	026-371-501	(9/0)	4.09	INSPECT LINK-TYPE FUSES & FUSE MOUNTINGS	MW 12M	-----
---	-------------	-------	------	--	--------	-------

FUSE PANELS

◆	026-371-501	(9/0)	4.10	INSPECT FUSE PANELS	MW 12M	-----
---	-------------	-------	------	---------------------	--------	-------

77 & 78-TYPE FUSES

◆	026-371-501	(9/0)	4.07	INSPECT 77 & 78-TYPE FUSES & FUSE MOUNTING	MW 12M	-----
---	-------------	-------	------	--	--------	-------