

NONCODED TOOLS

ADJUSTERS- I

DESCRIPTION


ARMATURE, AEC_o H-7056

Replaced by armature, adjuster, AEC_o H-13398-1.

ARMATURE, AEC_o H-14768


Replaced by the 597A tool.

ARMATURE STOP, AEC_o H-14769

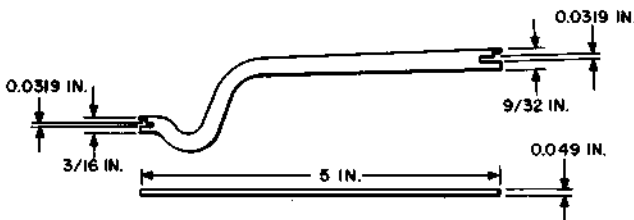

For use on step-by-step type relays.

BANK CONTACT, AEC_o H-7068-3

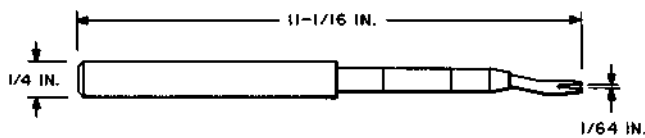


For use on plunger-type line and out-trunk switches.

BRUSH, MULTIPLE, D-159890


Replaced by the 583A tool.

CAM, AEC_o H-47202

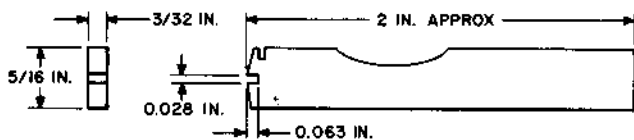


For use on 197-type switches.

DOUBLE DOG, AEC_o H-7067

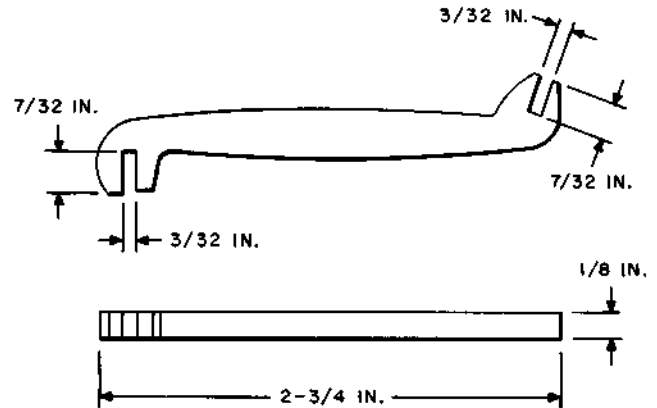

For use on 197- and 198-type switches and solenoid-type master switches.

FRAME, AEC_o H-13701

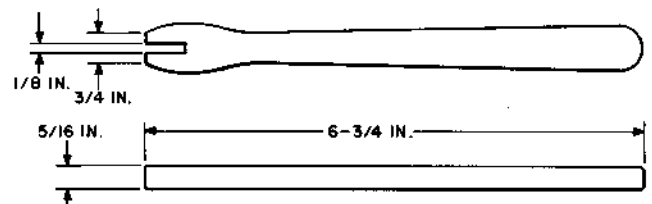

For use on solenoid-type master switches and plunger-type line and out-trunk switches.


KS-19355 L2

MFR DISC

Replaced by adjuster, KS-19355 L3.

KS-19355 L1, L3, L4, AND L5

In ordering, specify list number desired.

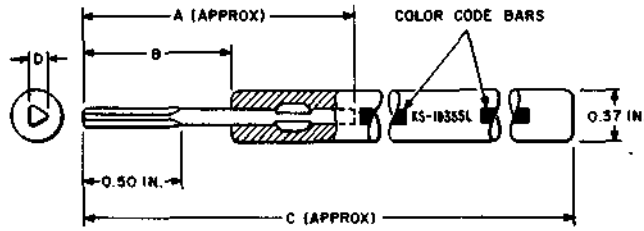


LIST NUMBER	DIMENSIONS				COLOR CODE
	A	B	C	D	
1	1.38	0.75	3.00	0.77	Black
3	2.18	1.56	3.82	.068	Red
4	1.38	0.75	3.00	.068	Blue
5	1.88	1.25	3.50	.077	Yellow

The KS-19355 L1 adjuster is for use in adjusting 1586 and 1590 inductors.

The KS-19355 L3 and L4 adjusters are intended for use in adjusting 1614 and 1642 inductors and 2576, 2583, 2597, 2601, and 2615 transformers.


The KS-19355 L5 adjuster is for use in adjusting 1590C inductors in the J-87303C oscillator in L4 Coaxial System.

KS-19915 L1

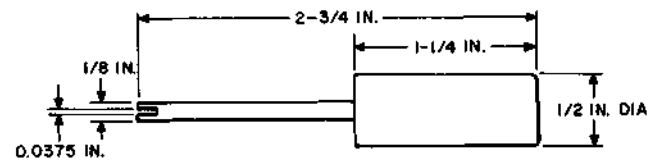

For use in adjusting contact separation on BF-, BG-, BJ-, and BL-type relays.


KS-20113 L2

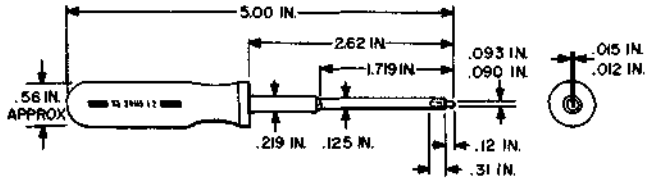

Used for tuning J68383 3A FM terminal. Replaces the KS-20113 L1 adjuster.

KS-20114 L1 AND L2


In ordering, specify list number desired.

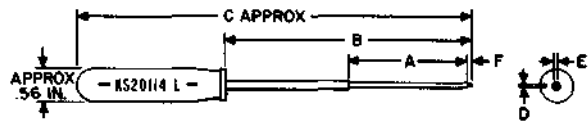

LIST NUMBER	DIMENSIONS						COLOR CODE
	A	B	C	D	E	F	
1	1.25	3.50	5.88	<u>.023</u> .018	<u>.090</u> .093	.12	Green
2	1.94	4.12	6.50	<u>.021</u> .019	<u>.090</u> .093	.06	Black


The KS-20114 L1 and L2 adjusters are used for adjusting the 3-type FM terminals in the TD-3 and TH-3 Microwave Radio Systems.

KS-20115 L1

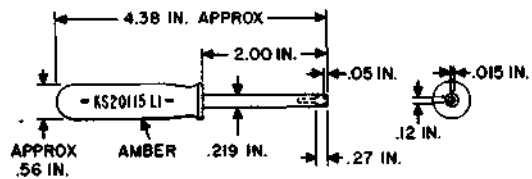


The KS-20115 L1 adjuster is for use with the J68337H test sets in adjusting the 3-type FM terminals.

KS-20116 L1

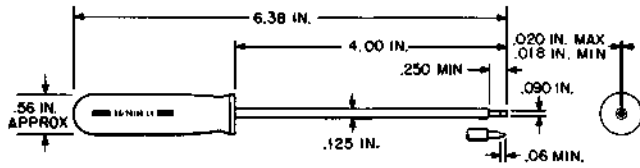


Used for tuning J68383 3A FM terminals.

KS-20266 L1

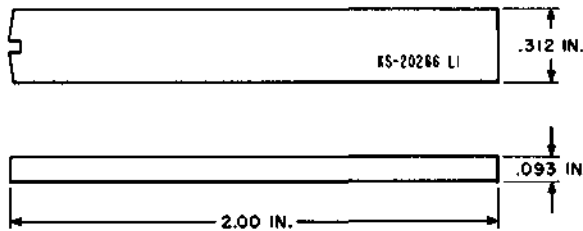



A rectangular-shaped, metal bar having a slot in the center on one end with this surface beveled from the slot to the sides. It is intended to be used for bending out cam teeth on normal post springs of 197-type switches.

KS-20481 L1

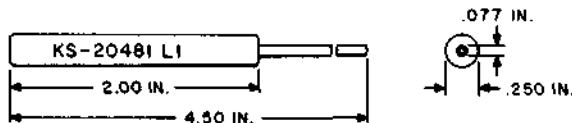


Used for adjusting 1668-, 1676-, 1678-, and 1698-type inductors.

KS-20929 L1

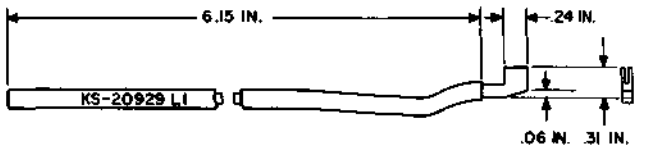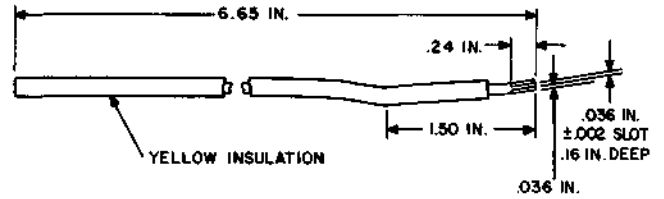


Replaces 766A tool. Used for adjusting heavy springs and the armature backstop of 221 FAE relays.

KS-20929 L2

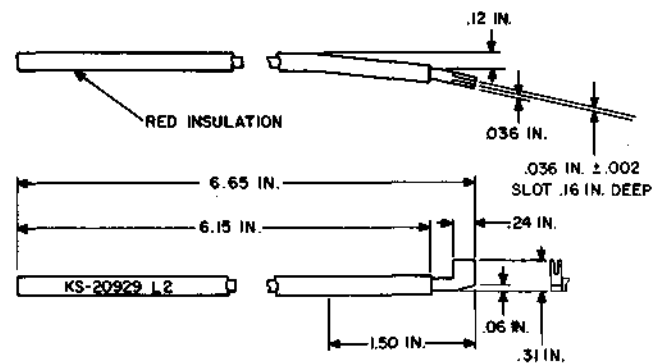


Replaces 766A tool. Used for adjusting heavy springs and the armature backstop of 221 FAE relays.

KS-20929 L3

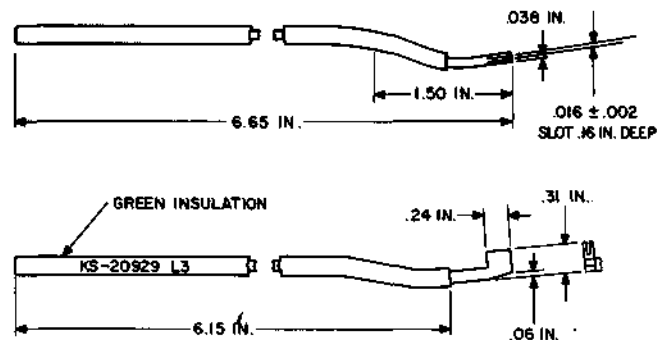


Replaces 764A and 765A tools. Used for adjusting upper and lower springs of 221 FAE relays.

KS-20929 L4

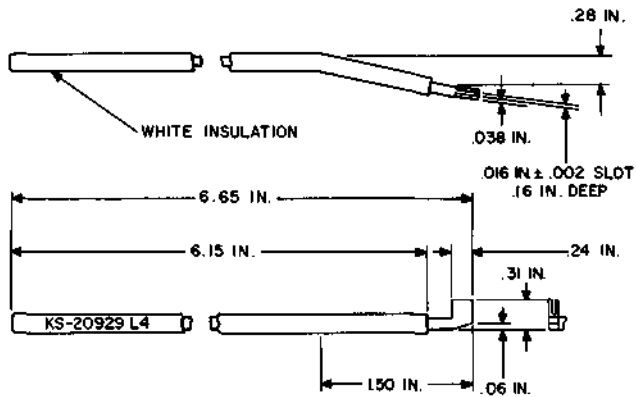

Replaces 765A tool. Used for adjusting lower springs of 221 FAE relays.

→KS-21258 L1←

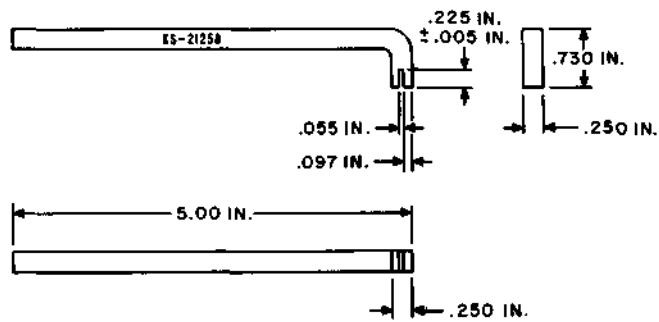

Used for adjusting the backstops of the U- and Y-type relays.