EQUIPMENT TEST LIST

PBX AIOD

	CONTENTS											PAGE	
1. GE	NERAL	•	•	•	•	•	•	•			•	•	1
10.1	ALARMS		•		•	•	•		•	•	•	•	2

1. GENERAL

1.01 This section provides an index and information access system to locate the standard tests applicable to equipment listed in the preceding table of contents. Test classification and frequency of periodic routine are also provided.

1.02 This Equipment Test List (ETL) is reissued to incorporate changes which are indicated by an arrow to the left of each line which has been changed.

1.03 Comments on this section should be made by following the instructions in Bell System Practices (BSP), Section 000-010-015.

1.04 Routine test information is arranged in the following order from left to right: Section number, issue/addendum, test letter or paragraph number, test title, test class, frequency, and the last space is for a locally assigned job number.

1.05 Section 010-300-011 provides Equipment Test List instructions.

NOTICE

Not for use or disclosure outside the Bell System except under written agreement

\$10.0 PBX AIOD				
10.1 PBX AIOD; ALARMS				
SELECT ONLY ONE CATEGORY				
ALARMS OPER TST PBX AIC	OD A1	EQUIPMENT		
♦ 201-830-501 (3/0)	A	FUSE ALARMS	MW 12	M
•	В	ALARM CIRCUITS	MW 12	M
•	с	MAJOR ALARM PATH FAILURE	MW 12	M
AIOD TYPE A2 ALM TSTS V	w/tst	CKT SD-1C235		
♦ 201-831-501 (4/0)	J	FUSE ALARM	MW 12	M
•	ĸ	CONVERTER ALARM & ALARM FAIL SAFE	MW 12	M
•	L	MAJOR & MINOR ALARM INTERFACE CIRCUIT	MW 12	M
TROUBLE TESTS				
♦ 201-831-501 (4/0)	A	SIMULATED PBX MESSAGE	тт	
•	В	SIMULATED CO REQUEST	TT	
•	С	SIMULATED CO REQUEST WITH TRK NO. CHANGE	TT	
•	D	MEMORY CHECK	TT	
•	Е	DATA LINK CONNECTOR	TT	
•	F	SIS & CONTROL CIRCUIT	TT	
•	G	DATA LK NO. TO OFF. IDX TRNSL	TT	
	н	SIS CONT CKT TRAP FUNCTION	TT	
•	I	INITIALIZATION	TT	

-