

**AUTOMATIC TRANSFER TEST LINE
USING TRUNK TEST CIRCUIT SD-25918-01
NO. 5 CROSSBAR OFFICES**

1. GENERAL

1.01 This section describes a method of testing the Automatic Transfer Test Line (ST-521143) and cross-connects in the Transfer Register for Incoming Test Line.

1.02 This test should be done before office is in service or in conditions of very light traffic.

2. APPARATUS

1011 G Handset.

3. METHOD

A. Regular Transfer Call

STEP	ACTION	VERIFICATION
1.	Busy all transfer registers except one.	
2.	Plug TelSet in any idle incoming trunk.	
3.	Dial Telephone number of Automatic Transfer Test Line (Obtain from office records)	Tripped ringing may be heard.
4.	Automatic Test Line dials digit one.	
5.	Auto Test Line informs transfer register to transfer call to ITTL. (Cross-connected in transfer register)	
6.	Trunk is transferred to ITTL.	2 ringing cycles are heard then trip followed by 120 IPM flashes.
7.	Remove TelSet.	
8.	Repeat steps 2 through 6 until all transfer registers have been tested.	