# 300-MEGABYTE MOVING HEAD DISK DRIVE

## KS-22072,L1

## PREVENTIVE MAINTENANCE

### **3B20D MODEL 2 PROCESSOR**

| CONTENTS   |  |   |  |  |  |   |   | PAGE |   |   |  |   |
|------------|--|---|--|--|--|---|---|------|---|---|--|---|
| 1. GENERAL |  | • |  |  |  | • | • |      | • | • |  | 1 |
| Tables     |  |   |  |  |  |   |   |      |   |   |  |   |

#### 1. GENERAL

- 1.01 This section is a cover sheet for manufacturer operating and service manuals for the KS-22072,L1 moving head disk. This moving head disk is a component of the 3B20D Model 2 processor. Copies of manufacturer manuals are supplied with each moving head disk. Additional copies can be ordered from parts lists by part number.
- 1.02 Whenever this section is reissued, the reasons for reissue will be listed in this paragraph.
- 1.03 Descriptive, theory of operation, installation, and operating information and maintenance instructions for the moving head disk are given in the manufacturer's manuals.

1.04 Preventive maintenance services required by the manufacturer are provided in the manual and are recapitulated in Table A. Where a conflict exists, the preventive maintenance services in the manufacturer's manual shall take precedence.

#### TABLE A

#### PREVENTIVE MAINTENANCE SERVICES

| TEST | TITLE                                | FREQUENCY |
|------|--------------------------------------|-----------|
| 1    | Clean Primary Air Intake<br>Filter   | 3 Months  |
| 2    | Check +5 Volt and -5 Volt<br>Outputs | 3 Months  |
| 3    | Clean Shroud and Spindle             | 6 Months  |
| 4    | Clean and Lubricate Lockshaft        | 6 Months  |
| 5    | Clean Carriage Rails and<br>Bearings | 6 Months  |
| 6    | Replace Absolute Air Filter          | 1 Year    |

#### NOTICE

Not for use or disclosure outside the Bell System except under written agreement