#### BELL SYSTEM PRACTICES AT&TCo Standard

f

### **300-MEGABYTE MOVING HEAD DISK DRIVE**

### KS-22072,L2

# **PREVENTIVE MAINTENANCE**

### **3B20D MODEL 2 PROCESSOR**

	CONTENTS					PAGE								
1.	GENERAL	•	•	•	•	•	. •	•	•	•	•	•	۱	
Tabl	es													
A.	Preventive	Mo	int	en	anc	e S	erv	ice	5	٠	•	•	2	
1.	GENERAL													

1.01 This section is a cover sheet for manufacturer operating and service manuals for the KS-22072,L2 moving head disk. This moving head disk is a component of the 3B20D Model 2 processor. Copies of manufacturer manuals are supplied with each

moving head disk. Additional copies can be ordered from parts lists by part number.

1.02 Whenever this section is reissued, the reasons for reissue will be listed in this paragraph.

1.03 Descriptive, theory of operation, installation, and operating information and maintenance instructions for the moving head disk are given in the manufacturer's manuals.

1.04 Preventive maintenance services required by the manufacturer are provided in the manual and are recapitulated in Table A. Where a conflict exists, the preventive maintenance services in the manufacturer's manual shall take precedence.

#### NOTICE

Not for use or disclosure outside the Bell System except under written agreement

Printed in U.S.A.

## TABLE A

1

# PREVENTIVE MAINTENANCE SERVICE

TEST	TITLE	FREQUENCY
1	Clean External Cabinet Surfaces	2 Months
2	Clean Air Shroud	2 Months
3	Inspect, Clean, and Lubricate Spindle Surface	2 Months
4	Inspect Spindle Drive Belt	2 Months
5	Clean Intake Air Filter	2 Months
6	Clean Internal Cabinet Surfaces	6 Months
7	Inspect and Clean Carriage and Way Assembly	6 Months
8	Check Resistance of Spindle Brush Grounding	6 Months
9	Check Power Supply Voltages	6 Months
10	Check Positioning System Adjustment	6 Months
11	Check Spindle Drive System Operation	6 Months
12	Replace Absolute Air Filter	1 Year

Page 2 2 Pages