## SCANNER, TEST, AND ALARM EQUIPMENT J68918 SCANNER FUNCTION TESTS COMMON EQUIPMENT ANALOG MULTIPLEX TERMINAL EQUIPMENT

This section provides a procedure for checking the operation of supergroup scanner J68918. This section is reissued to correct an error in the *Note* following Step 8. Arrows are used to indicate significant changes. *Equipment Test Lists are not affected*.

STEP PROCEDURE

**Note:** If the indicated pushbutton does not light in the following steps, pull off the plastic cover and replace the lamp.

## Manual Mode

Depress the MAN pushbutton on the scanner control panel (Fig. 1).

Requirement: The MAN pushbutton lights.

**Note:** One SG and one BK pushbutton will be lighted. In case of trouble in the selected supergroup, the RST pushbutton associated with the selected bank will also light.

2 Depress the BK 1 pushbutton.

**Requirement:** The BK 1 pushbutton lights.

**Note:** The SG pushbutton lamp remains lighted. In case of trouble in the selected supergroup, the RST 1 pushbutton will also light.

3 Depress the SG 13 through SG 28 pushbuttons, in turn.

**Requirement:** Each pushbutton lights as the pushbutton is depressed and the pushbutton previously lighted is extinguished. The red ALM lamp lights on the supergroup amplifier selected.

**Note:** In case of trouble in the selected supergroup, the RST 1 pushbutton will also light.

## NOTICE

Not for use or disclosure outside the Bell System except under written agreement

STEP PROCEDURE

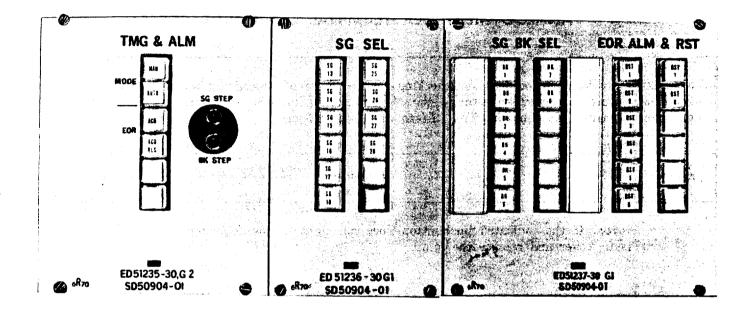


Fig. 1—♦Scanner Control Panel♦

4 Observe the GAIN and LEVEL meters after each pushbutton has been depressed.

**Requirement:** These meters indicate the gain deviation and the pilot level deviation from nominal in the supergroup amplifier selected.

**Note:** For an unequipped supergroup, a terminating unit must be provided in the shelf position to prevent a false end-of-range alarm.

- Repeat Steps 2 through 4 for the other supergroup banks by operating the BK 2 through BK 8 pushbuttons, in turn.
- 6 Connect the remote control cord with two pushbuttons to the STEP jacks.

**Note:** Insert the plug with the ridged edge up.

**Requirement:** The MAN pushbutton is extinguished and the AUTO pushbutton lights. The selected SG and BK pushbuttons remain lighted.

Depress the bank and supergroup pushbuttons in the cord to check that any desired bank and supergroup can be selected.

STEP	PROCEDURE
	Note: While the cord is in use, the pushbuttons for the selected bank and supergroup are lighted.
8	Remove the plug from the STEP jacks.
	Requirement: The AUTO pushbutton remains lighted.
	Note: ▶The group walking relays can be heard to operate every 12 seconds. After the group walking relays have operated, the next SG pushbutton will light. ♦
9	Depress the ACO pushbutton.
	<b>Requirement:</b> The ACO pushbutton lights, the MAN pushbutton remains extinguished, and the AUTO pushbutton remains lighted.
10	Depress the ACO RLS pushbutton.
	<b>Requirement:</b> The ACO pushbutton is extinguished and all other pushbuttons remain as before.
	<b>Note:</b> When either the MAN or ACO pushbutton is depressed, a timing circuit is started. After approximately four hours, the scanner is returned to the automatic mode.
	Automatic Mode
11	Depress the AUTO pushbutton on the scanner control panel.
	Requirement: The AUTO pushbutton lights.
	<b>Note:</b> One SG and one BK pushbutton will be lighted. In case of trouble in the selected supergroup, the RST pushbutton associated with the selected bank will also light.
12	Depress the ALM TST pushbutton and hold depressed for at least 2 seconds.
	Requirement: The RST pushbutton associated with the selected bank lights.
13	Depress the ACO, ACO RLS, and lighted RST pushbuttons.
	Requirement: The RST pushbutton is extinguished and the office alarm is silenced.
	Manual Mode
14	Depress the MAN pushbutton.
15	Repeat Steps 12 and 13.
16	Depress the AUTO pushbutton to restore the scanner to normal operation.