



SIMPLIFIED USER GUIDE PagePac® Plus System

To Enter the Programming Mode

1. Dial the PagePac Plus system access extension
2. Enter the connect password (if any)
3. press **[*][*]** and enter your programming password (if optioned)

System Configuration Options

Feature	Mode Option/ Verify	Dial	Listen For	Choose Option	Listen For	Default
Reset to Factory Defaults	To Select	1 0	Double Beep	Enter 25327 to reset. Enter any invalid number string to escape	Triple Beeps	25327 (CLEAR)
Number of Zone Map Digits	To Select To Verify	2 0 2 1	Double Beep	2 (digits) 3 (digits) 4 (digits)	Triple Beeps	2
Connect Password	To Select To Verify	3 0 3 1	Double Beep	Enter Password, enter # to terminate the string.	Triple Beeps	None
Programming Password	To Select To Verify	3 2 3 3	Double Beep	Enter Password, enter # to terminate the string.	Triple Beeps	* *
Confirmation Tone	To Select To Verify	4 0 4 1	Double Beep	0-Off 1-On	Triple Beeps	On
Pre-Announcement Tone	To Select To verify	4 2 4 3	Double Beep	0-Off 1-On	Triple Beeps	On
Talk-back Warning Tones	To Select To Verify	4 4 4 5	Double Beep	0-Off 1 - Initial 2 - Initial and 30 sec.	Triple Beeps	Initial and 30 sec.
VOX Timer Disconnect	To Select To Verify	5 0 5 1	Double Beep	Enter Duration 0-Off 1 - 10 sec. 4 - 40 sec. 2 - 20 sec. 5 - 50 sec. 3 - 30 sec. 6 - 60 sec.	Triple Beeps	30 Sec.
Computer Monitor (System)	To Select To Verify	5 2 5 3	Double Beep	0 - Computer Monitor	Triple Beeps	Computer Monitor

NOTES

Exit the programming mode by dialing **[#]**
The # key will terminate a digit string (i.e., Password string).



General Zone / Group Configurations

Feature	Mode Option/ Verify	Dial	Listen For	Zone/Group Selection	Listen For	Choose Option	Listen For	Default
Zone Map	To Select To Verify	6 0 6 1	Double Beep	Enter physical zone/group number.	Double Beep	Enter alias zone/group number.	Triple Beeps	None
Type of Zone	To Select To Verify	6 2 6 3	Double Beep	Enter zone/group number	Double Beep	0 - Output 1 - Input 1 2- Input 2	Triple Beeps	Output
Zone Grouping	To Select To Verify	6 4 6 5	Double Beep	Enter group number.	Double Beep	Enter zone numbers. A # will terminate the string.	Triple Beeps	None
Zone Monitor	To Select To Verify	6 6 6 7	Double Beep	Enter zone number or group	Double Beep	0 -Off 1 - On	Triple Beeps	OFF

NOTES :

When a Zone Map number (ALIAS) is changed, all of the previous options for that zone will be transferred to the new zone number

Program the Pagepac Plus using ALIAS numbers, if optioned. Otherwise, use Physical zone/group numbers

Exit the programming mode by dialing **[#]**

The **[#]** key will terminate a digit string (i.e. Zone Numbers string).

Output Zone / Group Configurations

Feature	Mode Option/ Verify	Dial	Listen For	Zone/Group Selection	Listen For	Choose Option	Listen For	Default
Type of Output	To Select To Verify	7 0 7 1	Double Beep	(Z)	Double Beep	0 - Audio/N.O. 1 - Mom. Open 2 - N/C 3 - Sys HS 4 - Toggle	Triple Beeps	Audio/ N.O
Page Enable	To Select To Verify	7 2 7 3	Double Beep	(Z,G)	Double Beep	0 - No 1 - Yes	Triple Beeps	Yes
Music Enable	To Select To Verify	7 4 7 5	Double Beep	(Z)	Double Beep	0 - No 1 - Yes	Triple Beeps	No
Talk-Back Enable	To Select To Verify	7 6 7 7	Double Beep	(Z,G)	Double Beep	0 - No 1 - Yes	Triple Beeps	No
Night-Bell Enable	To Select To Verify	7 8 7 9	Double Beep	(Z)	Double Beep	0 - No 1 - Yes	Triple Beeps	No
Pass DTMF to the Output	To Select To Verify	9 0 9 1	Double Beep	(Z,G)	Double Beep	0 - No 1 - Yes	Triple Beeps	No

NOTES:

Z = select Individual Zone

G = select Zone Group (including All Call group)

Program the PagePac Plus using ALIAS numbers, if optioned. Otherwise, use Physical zone/group numbers

Exit the programming mode by dialing **[#]**.



Input Zone / Group Configurations

Feature	Mode Option/ Verify	Dial	Listen For	Zone/Group Selection	Listen For	Choose Option	Listen For	Default
Activate Tone via an Input Closure	To Select To Verify	9 2 9 3	Double Beep	Enter the input zone number.	Double Beep	0 - None 1 - Chime 2 - Siren 3 - Warble Siren 4 - Night Bell 5 - Fast Ring 6 - Steady Tone 7 - Door Bell	Triple Beeps	None
Tone Routing	To Select To Verify	9 4 9 5	Double Beep	Enter the input zone number.	Double Beep	Output zone/group number	Triple Beeps	None
Audio Source Enabled	To Select To Verify	9 6 9 7	Double Beep	Enter the input Zone number.	Double Beep	0 - None 1 - AA 2 - T/R	Triple Beeps	None
Audio Routing	To Select To Verify	9 8 9 9	Double Beep	Enter the input Zone number.	Double Beep	Output zone/group number	Triple Beeps	None

NOTE :

Program the PagePac Plus using the ALIAS numbers, if optioned. Otherwise, use Physical zone/group numbers

Exit the programming mode by dialing **[#]**

The **[#]** key will terminate a digit string (i.e Zone Numbers string).

The Copy Command

Copy Command	Dial 12	Double Beeps	Enter zone number that is to be copied.	Double Beeps	Enter the beginning of the range.	Double Beeps	Enter end of the range.	Triple Beeps
-----------------	------------	-----------------	---	-----------------	---	-----------------	----------------------------	-----------------