TRANSPARENT WINDOWS FOR TURNBUTTON AND KEY TELEPHONE SETS

1. GENERAL

1.01 This section contains information on transparent windows used on turnbutton and key telephone sets (Fig. 1).

1.02 This section is reissued to:

- Show transparent window forms with preprinted information is no longer available
- Add information on clear transparent window forms.

Since this section covers a general revision, arrows ordinarily used to indicate changes have been omitted.

2. IDENTIFICATION

2.01 Table A lists the recommended replacements for the old forms.


2.02 The new forms are perforated on continuous clear acetate without preprinted information, therefore it is necessary to order an appropriate station number card form. Refer to Section 501-150-100 for additional information.

- 2.03 Forms are ordered by the package, with 1000 cards per package.
- 2.04 Order as follows;
 - (a) (Quantity) Form E-10374

Note: This form is used with rotary dial equipped telephone sets.

(b) (Quantity) Form E-10375

Note: This form is used with TOUCH-TONE[®] dial equipped sets.

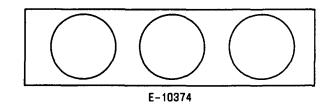 

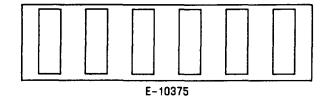 


Fig. 1—New Transparent Windows

NOTICE

Not for use or disclosure outside the Bell System except under written agreement

♦ TABLE A ♦

RECOMMENDED REPLACEMENTS FOR OLD TRANSPARENT WINDOW FORMS

٦

| FORMS | | |
|-------------|---------------------|---|
| OLD FORM | REPLACED BY FORM | |
| E-2959 | | On each station in a multistation system |
| E-4609 | | To indicate which line is connected to the set as deter- mined by position of the turnbutton |
| E-4610 | | To indicate ON or OFF position of the turnbutton. |
| E-4611 | | To indicate ON or OFF position of headset |
| E-4612 | E-10374 | To indicate when ringer is ON or OFF |
| E-4613 | | To indicate when an extension is connected to or excluded from the line |
| E-4614 | | To indicate whether central office or local line is con- nected to the set |
| E-4615 | | To indicate whether central office or private line is con- nected to the set |
| E-4809 | | Same as 4614 except for PRINCESS [®] set |
| E-4810 | | To indicate which central office line is connected to the PRINCESS set |
| E-5414 | E-10375 | On TOUCH-TONE [®] sets and TRIMLINE [®] sets in multistation systems |