

**EQUIPMENT TEST LIST**

**500 SERIES PBX**

**SEE SECTION 010-300-011 FOR EQUIPMENT TEST LIST INSTRUCTIONS.**

EQUIPMENT TEST LIST						
B.S.P.	I S S	TEST OR REQT.	EQUIPMENT AND WORK DESCRIPTION	CLASS	FREQ.	JOB NO.
536-4			550 SERIES PBX—SECTIONS APPLYING			
			TO MORE THAN ONE TYPE			
536-490-600	5		MISC CIRCUITS—TEST & INSPECTION			
		A	Ringin <del>g</del> Supply	MW	12M	
		B	Battery Supply	MW	12M	
		C	Battery Cutoff & Aux Signal Ckt	MW	12M	
		D	Groupin <del>g</del> Circuit (555 & 556A)	MW	12M	
		E	Groupin <del>g</del> Circuit (557A)	MW	12M	
		F	Alarm (551D, 556A, 557A)	MW	12M	
536-5			550-, 552-, 555-, 556-, 557-, & 558A-PBX			
536-520			552-Type PBX			
536-520-600	3		MISC CIRCUITS—TEST & INSPECTION			
		3.01	Generator Feeder	MW	12M	
		3.02	Ringin <del>g</del> Current	MW	12M	
		3.03	Hand Generator	MW	12M	
		3.04	Reversed Generator	MW	12M	
		3.05	Night Alarm & Aux Sig Circuit	MW	12M	
		3.11	Battery Cutoff	MW	12M	
536-0			505-, 506-, & 507-TYPE PBX			
536-580-210	2		IDENTIFICATION, INSTALLATION, CONNECTIONS, INSPECTION, TESTS, METHOD OF OPR—558A PBX			
		G	Power Failure Transfer	MW	12M	
		H	Fuse and Trouble Alarm	MW	12M	
536-050			505B, 505C, 506A, & 506B PBX			
536-050-511	2		CIRCUIT TESTS	TT		
536-070			507A & 507B PBX			
536-070-511	2		CIRCUIT TESTS	TT		
536-070-512	1		ACCESS LINE CIRCUIT SD-66918	TT		
			IN-SERVICE TESTS			
536-4			550 SERIES PBX—SECTIONS APPLYING			
			TO MORE THAN ONE TYPE			
536-490-507	3		ATTENDANT TEL & DIAL CIRCUITS— TEST & INSPECTION	TT		
536-490-525	3		CORD CIRCUITS—MANUAL TESTS	TT		
536-490-660	3		EXTENSION LINES—CIRCUIT TESTS	TT		
536-490-665	5		CO TRUNKS—OPERATION TESTS	TT		
536-490-666	2		TIE TRUNK CIRCUITS—OPERATION TESTS	TT		





4000000000

97

→

)

)

)

)

