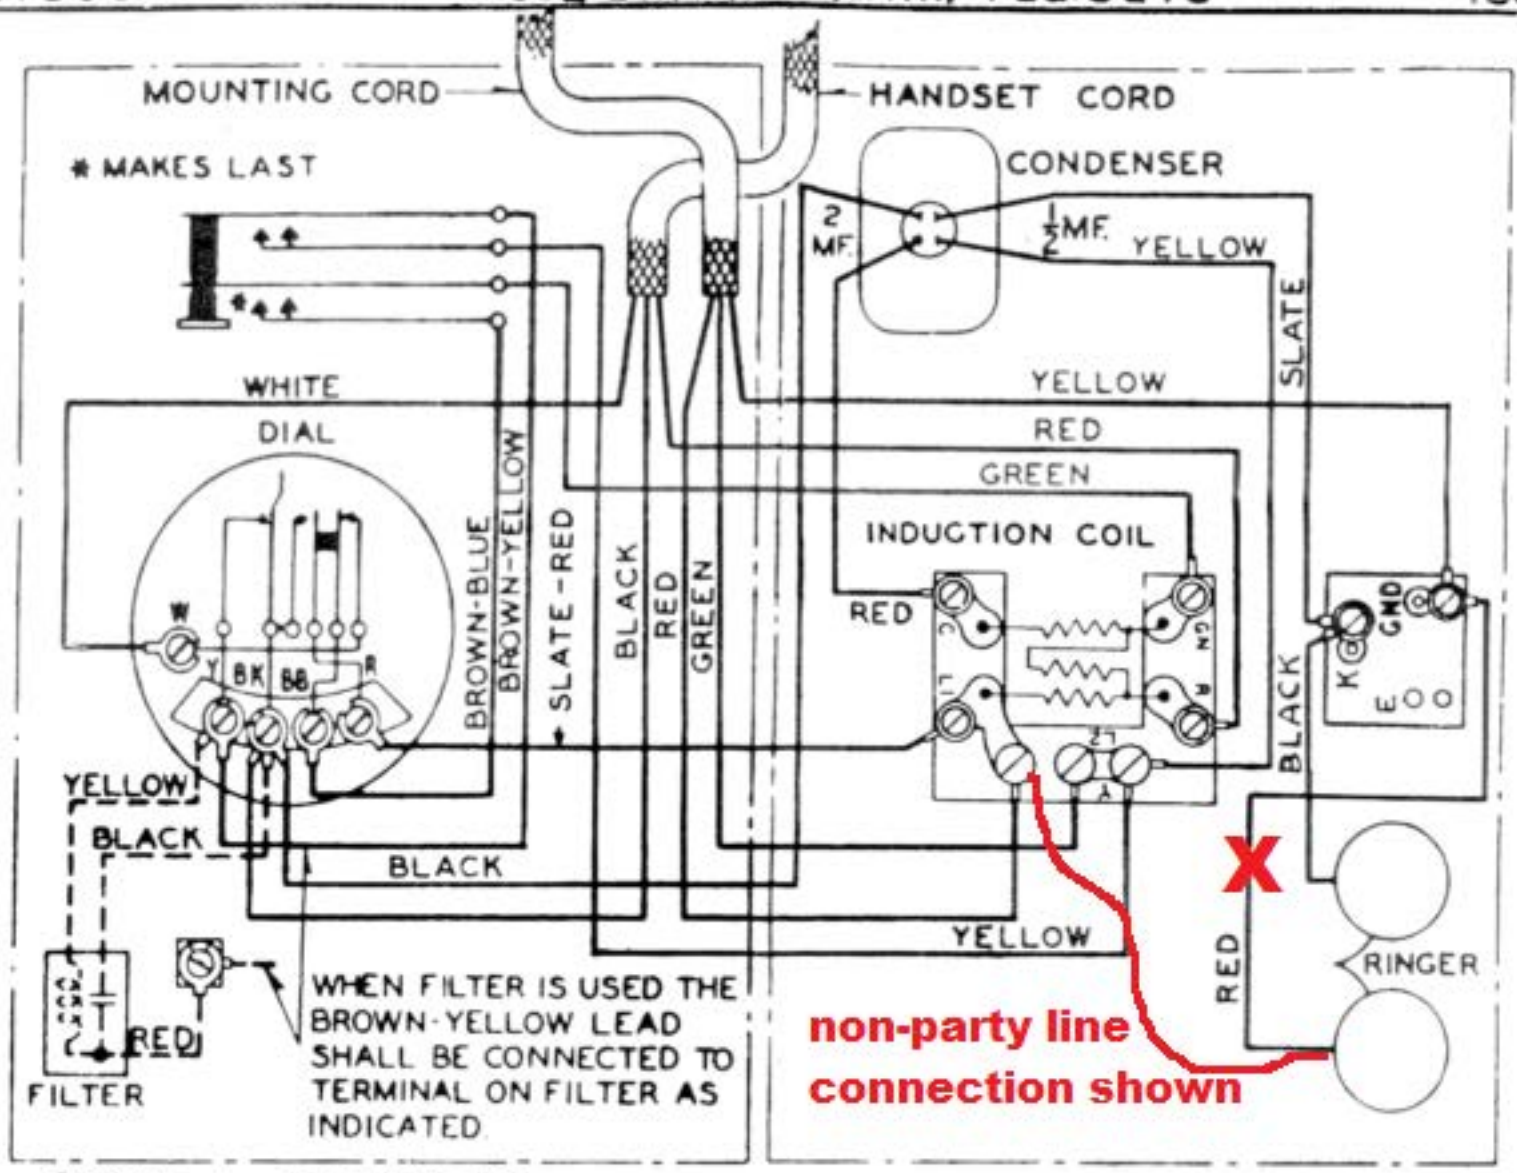

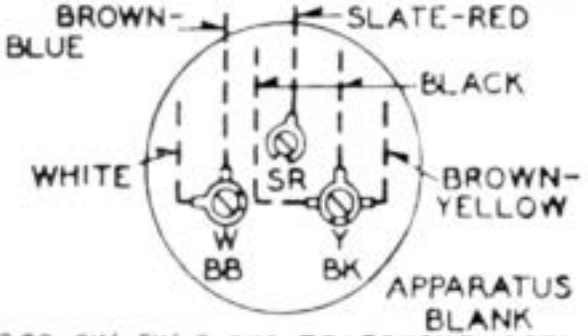

5. 302-EW, FW & GW TELEPHONE SETS NORMALLY CONNECTED FOR TIP PARTY.

NOTES

1. 302-EW TEL. SET EQUIPPED WITH APP. BLANK.
2. 302-FW, GW & HW TEL. SETS EQUIPPED WITH DIAL
3. CONNECT FREE END OF MTG. CORD: RED TO RING SIDE OF LINE, GREEN TO TIP SIDE OF LINE, YELLOW TO GND.
4. FOR RING PARTY.
   CONNECT MTG. CORD IN SET: RED TO L2Y, GREEN TO L1, YELLOW TO GND.; CONNECT RINGER LEAD RED TO K, BLACK TO GND.
   FOR TIP PARTY.
   CONNECT MTG CORD IN SET: RED TO L1, GREEN TO L2 YELLOW TO GND.; CONNECT RINGER LEADS: BLACK TO K, RED TO GND.