


NONCODED TOOLS

EXTRACTORS

DESCRIPTION

EXTRACTOR, HELI-COIL CORP


In ordering, specify number of tool desired.

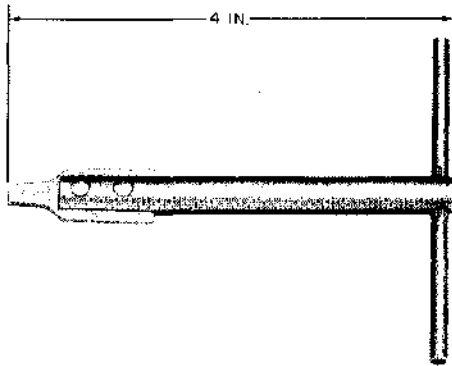

TOOL NUMBER	WILL EXTRACT "INSERTS"	THREAD SIZES
1227-06	1185-2CN	8-32
1227-6	1191-3CN	10-32
1227-6	1191-4CN	1/4-28
1227-6	1191-5CN	5/16-24


For use on KS-13835 readers.

EXTRACTOR, KS-19099 L1

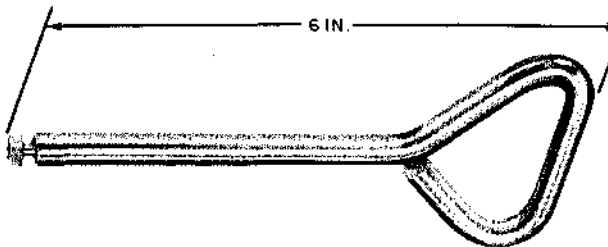


For use in removing packaged semiconductor amplifiers from L-type multiplex equipment.

EXTRACTOR, KS-19898 L1

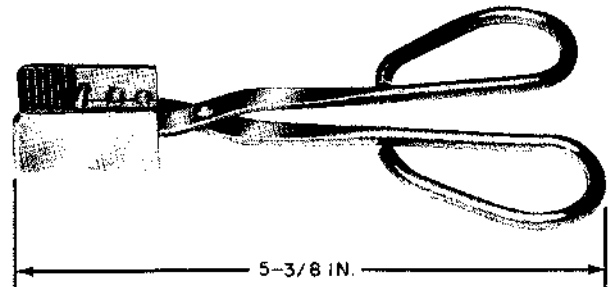


For use in removing the 372A and similar-type patching plugs from the A2A Video System.

EXTRACTOR, KS-20141 L1

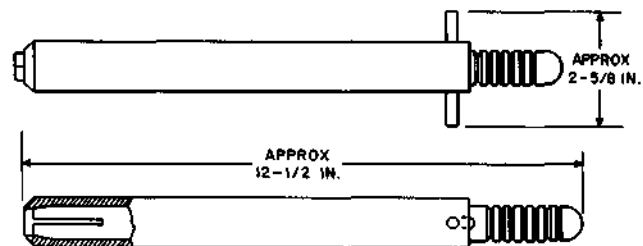

For use in extraction and insertion of 51A pads in L4 Coaxial System.

→EXTRACTOR, KS-21144 L1←

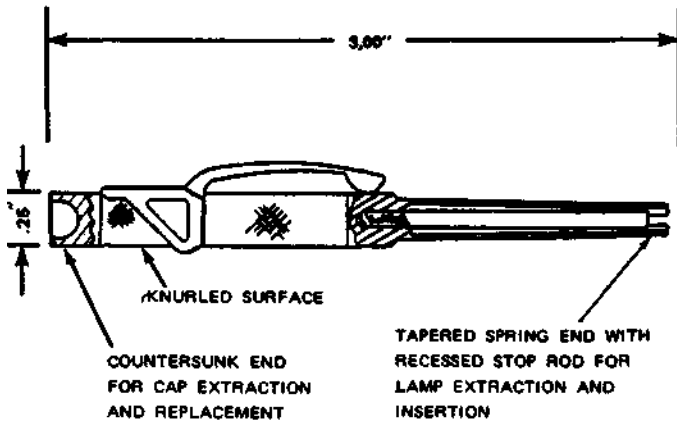


Lamp and cap extractor.

A double-ended tool used to remove the cap and T1-type lamp from the miniature lamp assemblies used in L4 and L5 terminal equipment.


Refer to Section 075-126-301 for details and use.

EXTRACTOR, PIN, KS-14457

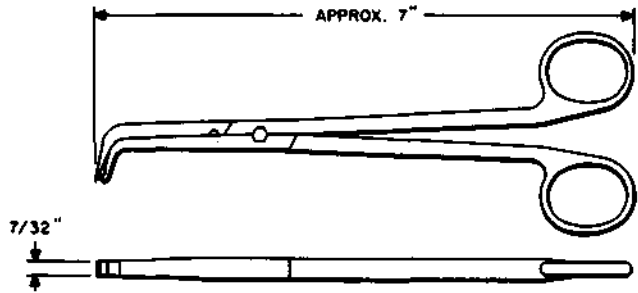


For use in removing and replacing pins in KS-13882 perforators in AMA accounting centers and central offices.

EXTRACTOR, TUBE, KS-5637 L1

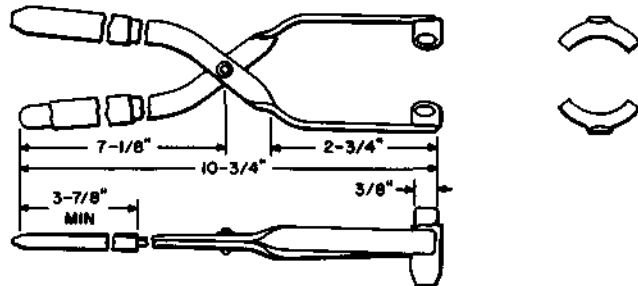

For use in extracting 373A and 374A electron tubes from K2 carrier telephone equipment panels.

EXTRACTOR, MORRILL AND MORRILL NO. 218

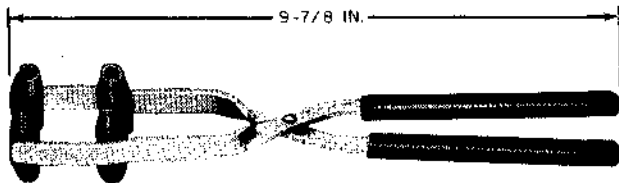


For use in extracting 310- and 311-type electron tubes.

EXTRACTOR, TUBE, KS-13753 L1 MFR DISC

Replaced by the KS-13753 L2 extractor.

EXTRACTOR, TUBE, KS-13753 L2

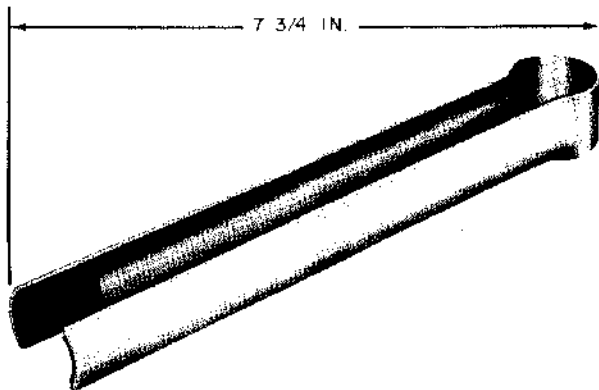

Replaces the KS-13753 L1 extractor.
For use in extracting 7-pin and 9-pin miniature electron tubes.


EXTRACTOR, TUBE

See also PULLERS.

EXTRACTOR, TUBE, INSULINE CORP NO. 1001


Replaced by the General Cement Mfg Co No. 5092 tube extractor.

EXTRACTOR, TUBE, KS-14408

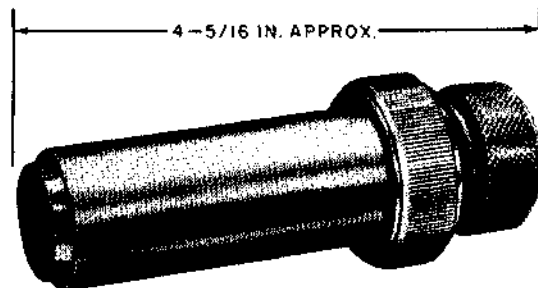


For use in extracting and inserting the 416A electron tubes.

EXTRACTOR, TUBE, KS-14428

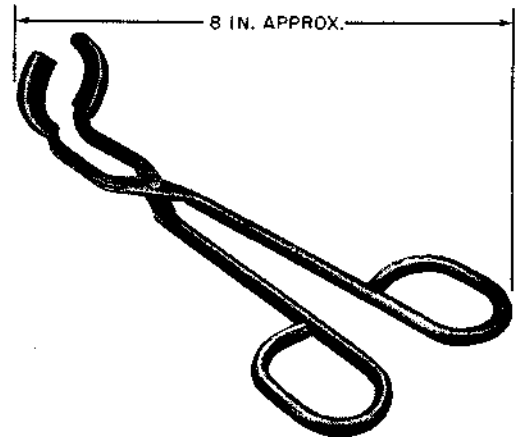

For use in extracting the 375A and similar-type octal base electron tubes and for removing and replacing 89-type resistors.

EXTRACTOR, TUBE, GENERAL CEMENT MFG CO NO. 5092

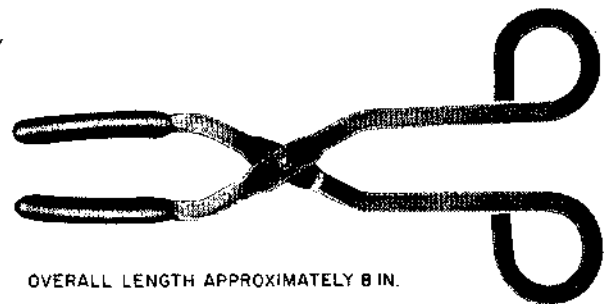

OVERALL LENGTH APPROXIMATELY 8 IN.

Replaces the Insuline Corp No. 1001 tube extractor.
For use in extracting and inserting miniature electron tubes which have deeply recessed sockets or sockets with base-shield extensions.